

POSITIONING INSTRUCTIONS:

1. TO INSTALL C-ADP-116 (KEYBOARD ADAPTER), YOU WILL NEED TO PROPERLY POSITION YOUR KEYBOARD ON THE ADAPTER. USE THE HOLE PATTERN THAT BEST ALLOWS THE KEYBOARD AND ADAPTER TO BE CENTERED WITH EACH OTHER. IF POSSIBLE, DO NOT ALLOW THE KEYBOARD OR THE ADAPTER TO BE CANTILEVERED MORE THAN ¾ OF AN INCH FROM THE EDGE OF THE OTHER.

2. C-ADP-116 WILL ACCEPT VESA 75, AMPS, AND 2.5" SQUARE (HOLE PATTERNS).


MOUNTING INSTRUCTIONS:

NOTE: DO NOT DEFORM HAVIS ADAPTER IN ANYWAY. DEFORMATION CAN RESULT BY TIGHTENING FASTENERS TO ADAPTER WHEN SURFACE OF KEYBOARD IS NOT FLUSH. THE MOUNTING SURFACE OF INTENDED KEYBOARD MUST BE FLAT AND FREE OF MOUNTING OBSTRUCTIONS.

1. DISTINGUISH WHAT TYPE OF FASTENER THE INTENDED KEYBOARD USES. REFER TO KEYBOARD'S MANUFACTURER FOR CORRECT THREAD SIZE AND TYPE. WE HAVE INCLUDED (5) QTY. IMPERIAL: MACHINE SCREW, BLACK, #8-32 X 0.625 IN. LONG & (5) QTY. METRIC: MACHINE SCREW, M4 X 0.7mm X 16mm LONG FASTENERS.


2. ONCE A MATING THREAD TYPE HAS BEEN ESTABLISHED FOR THE INTENDED KEYBOARD. POSITION KEYBOARD & HAVIS KEYBOARD ADAPTER ACCORDING TO THE POSITIONING INSTRUCTIONS. USING PROVIDED LOCK WASHERS & FLAT WASHERS AS ILLUSTRATED, FASTEN ADAPTER TO KEYBOARD IN AT LEAST (4) PLACES SO THAT ALL USED LOCK WASHERS ARE FULLY DEPRESSED. FOLLOW THE INTENDED KEYBOARD MANUFACTURE'S RECOMMENDED TORQUE VALUES.

ILLUSTRATED KEYBOARD FOR REFERENCE ONLY NOT INCLUDED

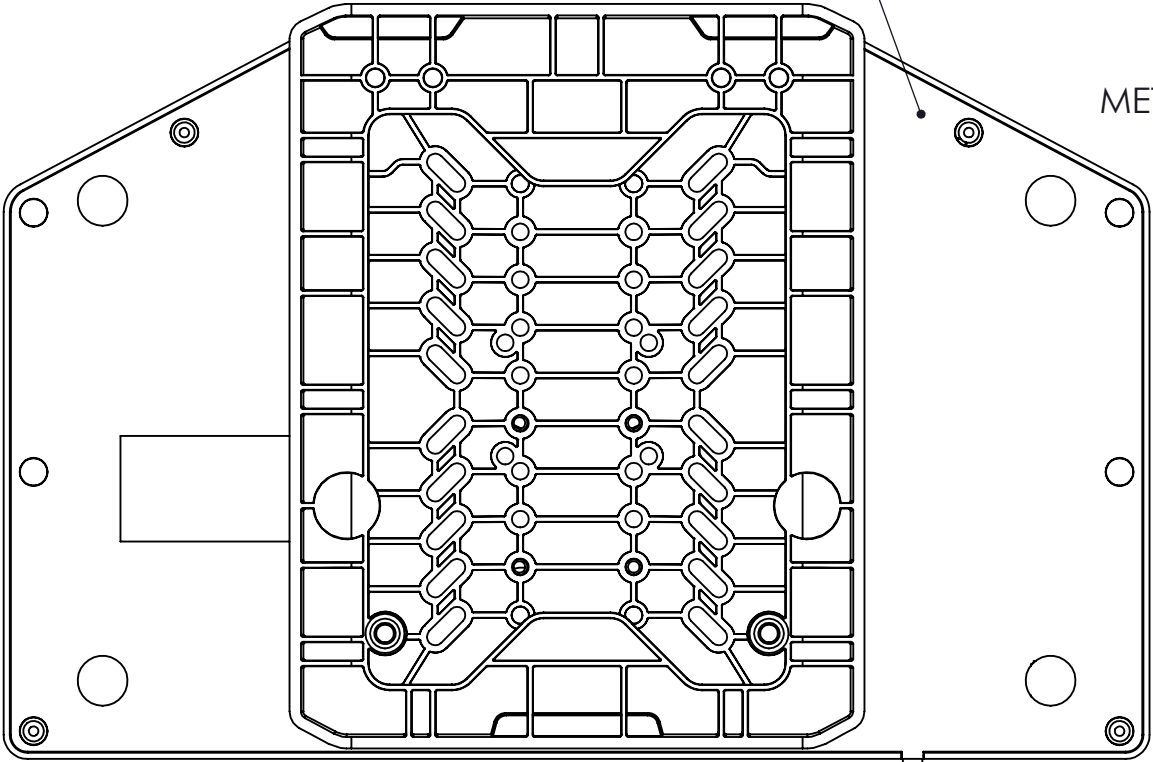


IMPERIAL: ③

METRIC: ④

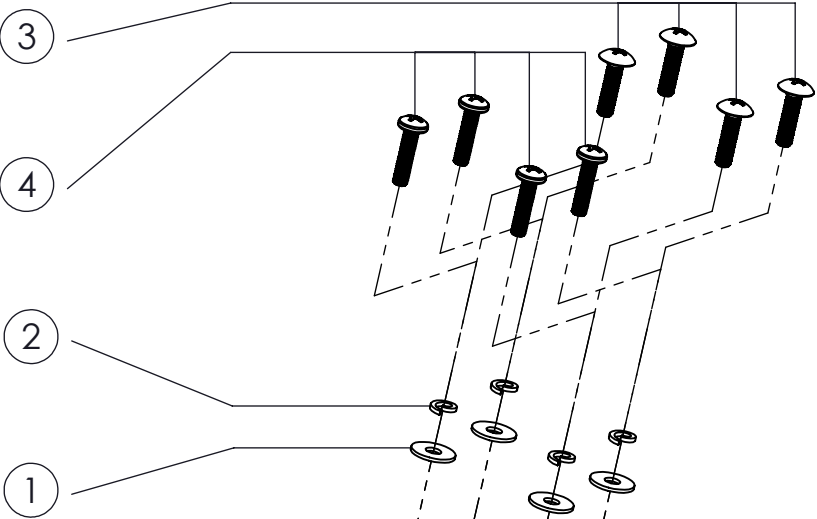

AMPS PATTERN ILLUSTRATED
*OPTIONAL: VESA 75 (75 X 75 mm)
*OPTIONAL: 2.5 X 2.5 in

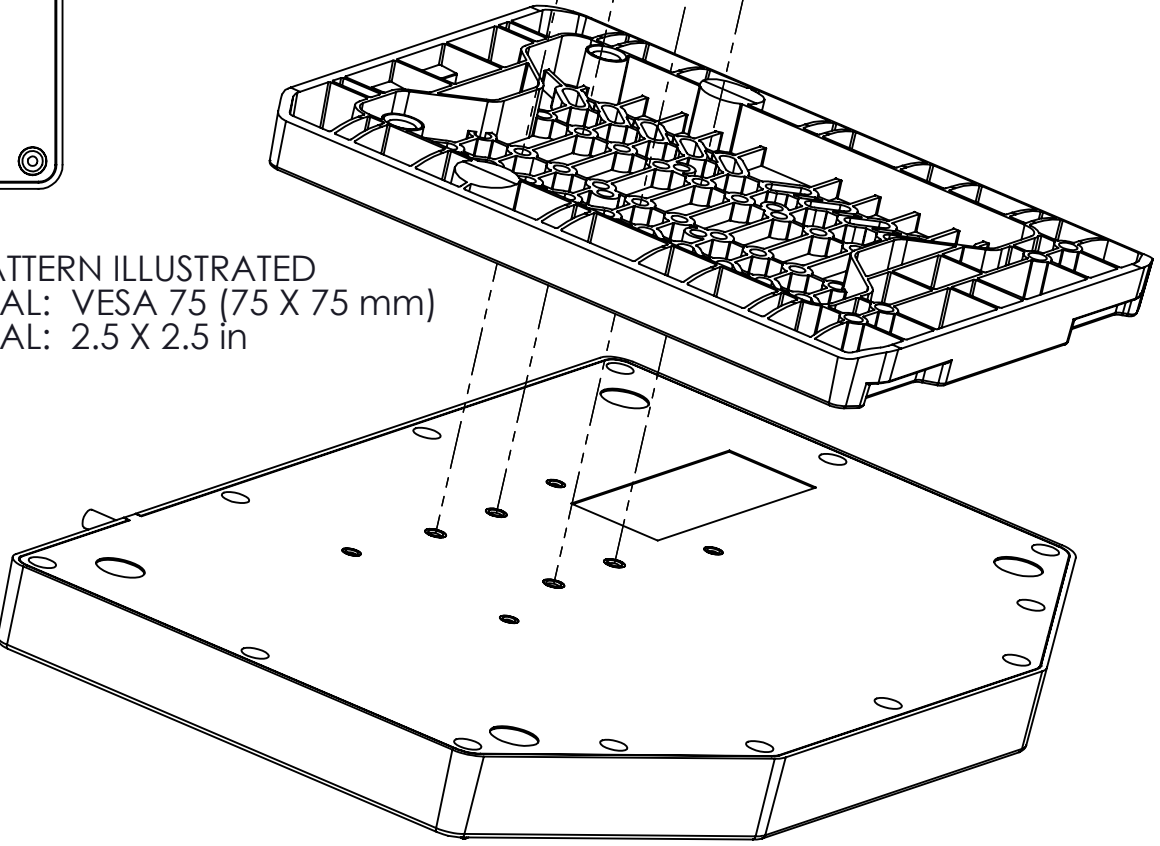


HARDWARE KIT CONTENTS				
ITEM #	DESCRIPTION	QTY.	FINISH	DRIVE STYLE/SIZE
1	WASHER, M4, 1.0 mm THICK	5	PLAIN	
2	LOCK WASHER, M4, 7 mm OD, 1.1 mm THICK	5	PLAIN	
3	8-32 X 5/8 in. MACHINE SCREW	5	BLACK OXIDE	PH2
4	M4 X 0.7 mm X 16 mm MACHINE SCREW	5	PLAIN	PH2

DRAWING NUMBER:
C-ADP-116_INST_8-16

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

PRODUCT DESCRIPTION

THIS PRODUCT SUPPLIES 3RD PARTY KEYBOARD USERS THE ABILITY TO MOUNT TO HAVIS' RUGGED KEYBOARD MOUNT

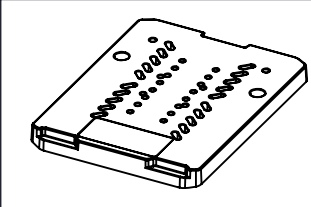

PRODUCT I.D. C-ADP-116	DATE 08-16-16
PRODUCT NAME HAVIS RUGGED KEYBOARD ADAPTER	
 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS) 0.373
	REV. DATE 08-16-16

DOCKING INSTRUCTIONS:



NOTE: THE KEYBOARD MOUNT SHOULD BE FIRMLY FIXED INTO DESIRED POSITION AND NOT LOOSE BEFORE DOCKING KEYBOARD/ADAPTER.

1. WHILE SLIGHTLY TIPPING THE KEYBOARD TOWARD YOU, ALIGN C-ADP-116 (HAVIS' KEYBOARD ADAPTER) WITH C-KBM-201 (HAVIS' RUGGED KEYBOARD MOUNT) BY JOINING THE KEYBOARD MOUNT'S LOCATING TABS WITH THE ADAPTER'S FRONT CAVITIES. ILLUSTRATED IN DETAIL 'A' OF STEP ①.

2. ONCE THE ADAPTER AND KEYBOARD MOUNT ARE POSITIONED TOGETHER IN THIS WAY, LOWER THE REAR SIDE OF THE KEYBOARD/ADAPTER DOWN SQUARELY SO THAT THE REAR HOOK OF THE KEYBOARD MOUNT AND ADAPTER COME INTO CONTACT. CONTINUE TO SEAT THE KEYBOARD/ADAPTER DOWN UNTIL FLAT AGAINST THE KEYBOARD MOUNT AS ILLUSTRATED IN STEP ②.

NOTE: DO NOT FORCE ADAPTER ONTO MOUNT OR DAMAGE MAY OCCUR. IF MOUNT DOES NOT LATCH, CHECK FOR OBSTRUCTIONS OR IMPROPER ALIGNMENT OF LOCATING POST.

3. WHILE PRESSING THE KEYBOARD AND ADAPTRER DOWN, MAKE SURE THAT THE REAR HOOK OF THE KEYBOARD MOUNT FULLY ENGAGES WITH THE ADAPTER AS ILLUSTRATED IN STEP ③.

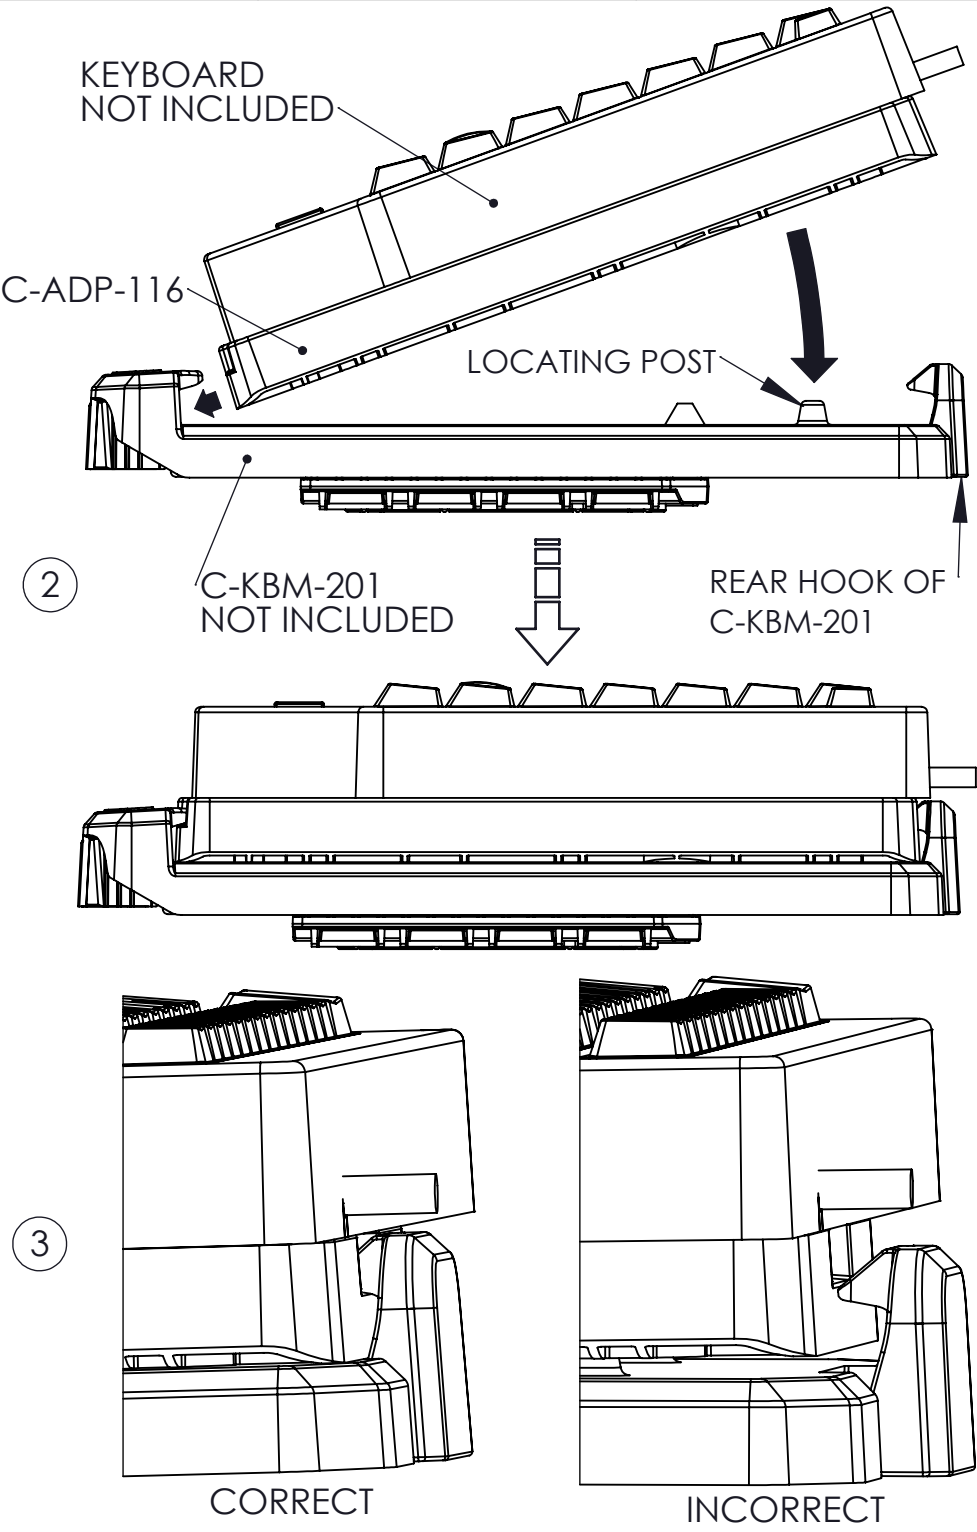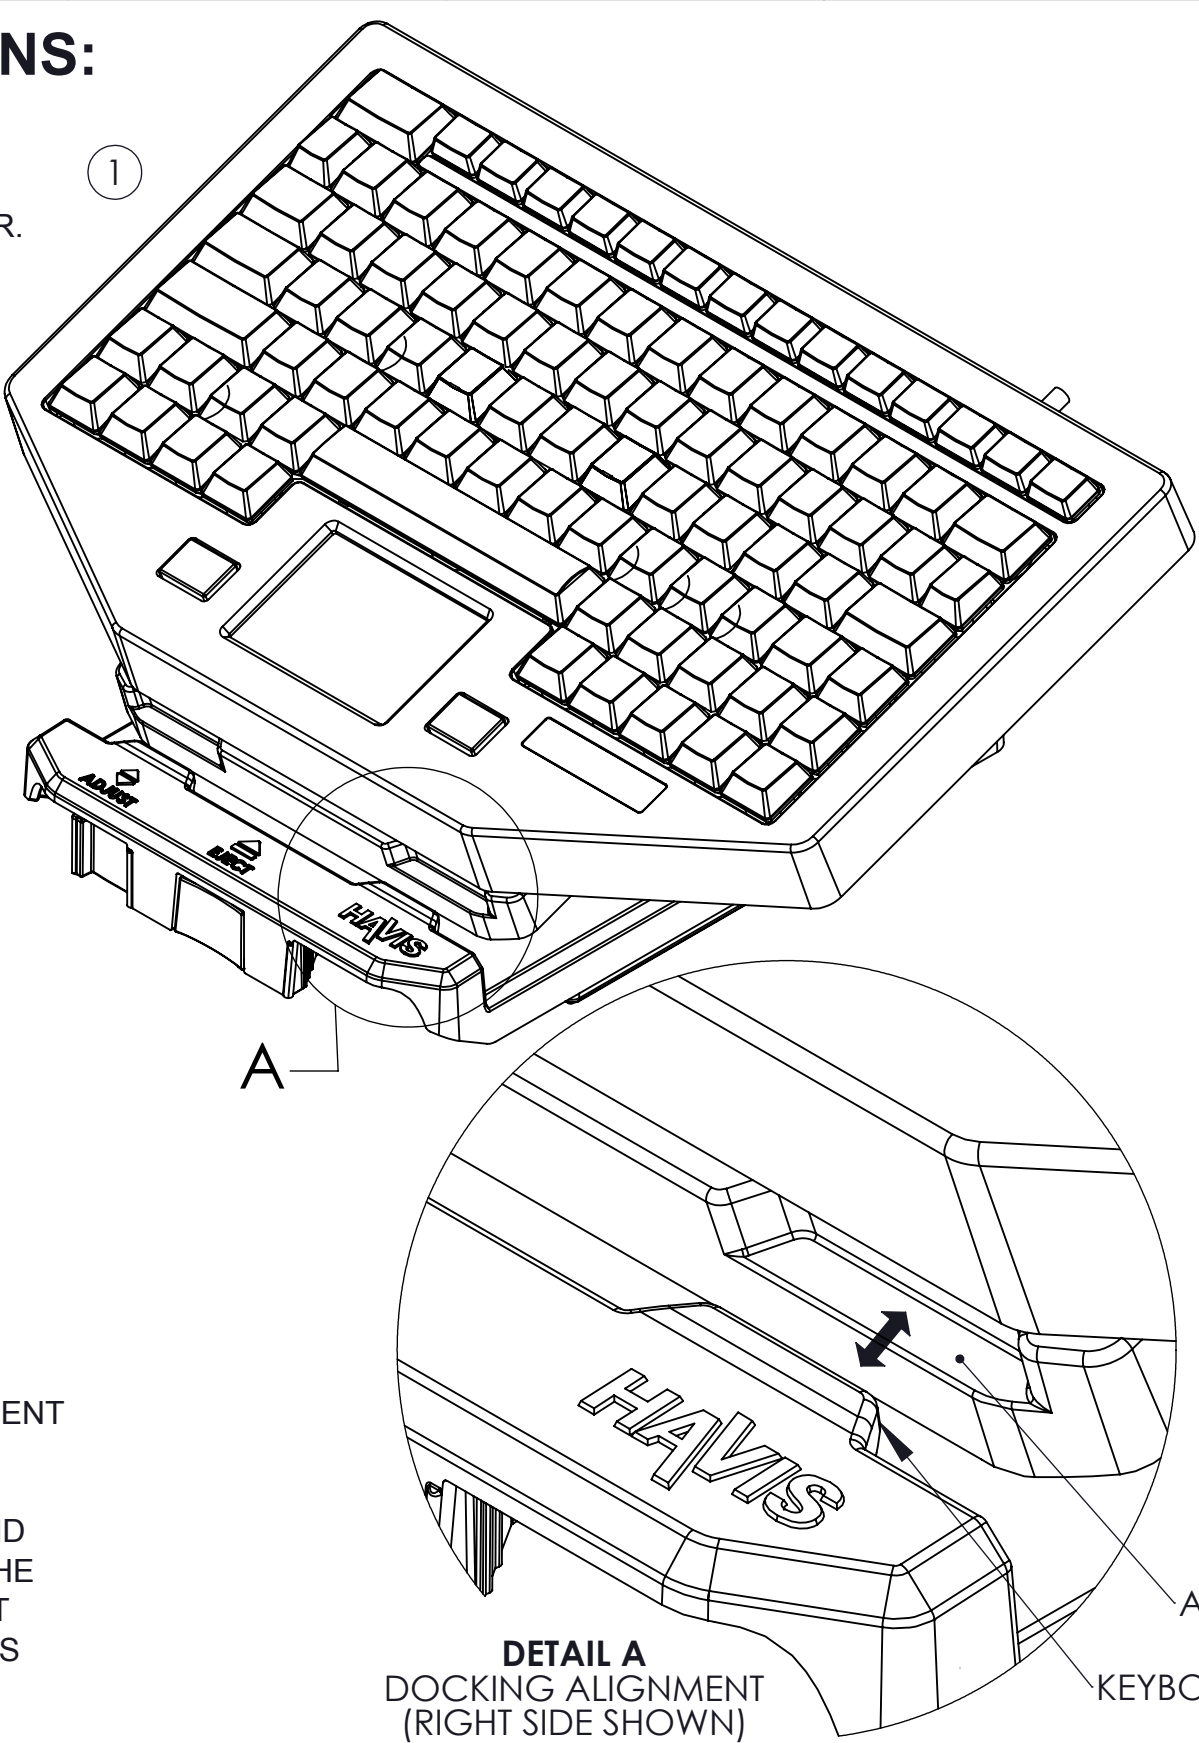

DRAWING NUMBER:
C-ADP-116_INST_8-16

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

PRODUCT DESCRIPTION
THIS PRODUCT SUPPLIES 3RD PARTY KEYBOARD USERS THE ABILITY TO MOUNT TO HAVIS' RUGGED KEYBOARD MOUNT

PRODUCT I.D. C-ADP-116	DATE 08-16-16
PRODUCT NAME HAVIS RUGGED KEYBOARD ADAPTER	
 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS) 0.373
	REV. DATE 08-16-16