


INSTALLATION INSTRUCTIONS

1. REMOVE REAR SEAT BOLTS. DISENGAGE FRONT SEAT HOOKS BY TILTING THE SEAT FORWARD AND PULLING THE SEAT TOWARDS THE REAR OF THE VEHICLE.
2. SLIDE BASE PLATE IN BETWEEN FLOOR AND SEAT BRACKETS, ALIGNING THE LARGE CUTOUTS WITH THE OEM FLOOR SLOTS FOR THE SEAT HOOKS.
3. RETURN THE SEAT TO ITS ORIGINAL POSITION BY REENGAGING THE SEAT HOOKS SANDWICHING THE HDM MOUNT.
4. PUSH IN THE FILLERS TO FILL IN THE GAP BETWEEN THE SEAT BRACKET AND BASE. 2 PER SIDE.
5. REINSTALL OEM REAR SEAT BOLTS AND TIGHTEN TO VEHICLE MANUFACTURER'S TORQUE SPECIFICATION.
6. FOLLOW GENERAL INSTRUCTIONS FOR POLE AND UPPER MOUNT PARTS.

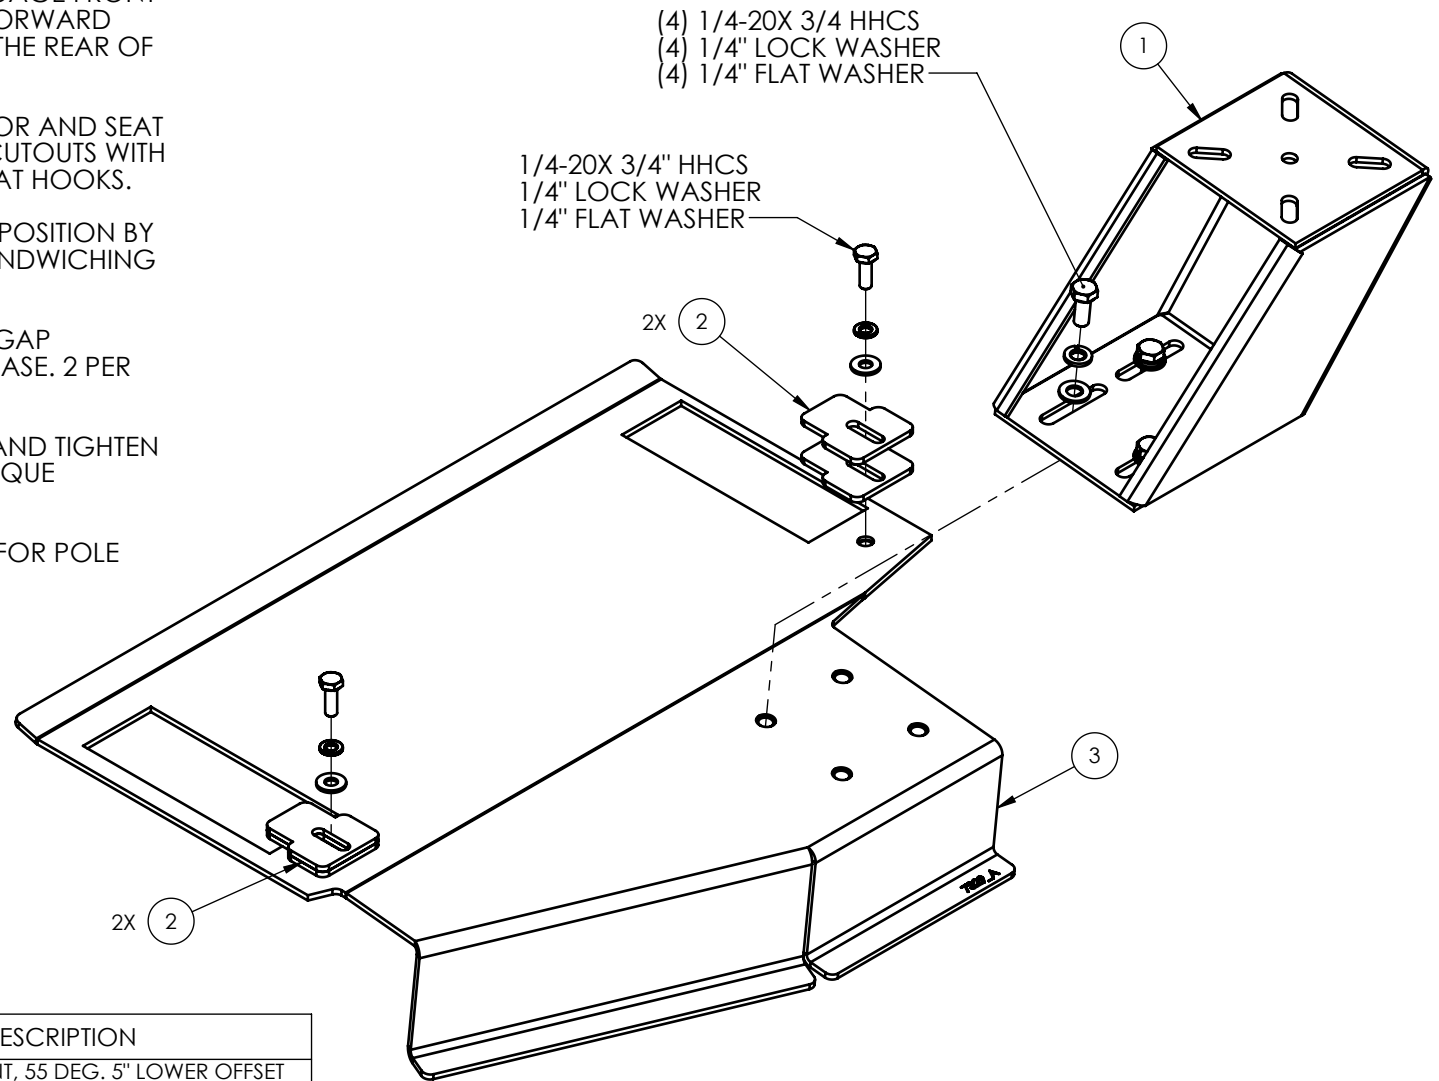

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	10-002531	BRACKET, MOUNT, 55 DEG. 5" LOWER OFFSET BASE W/ SLOTS
2	4	10-006196	BRKT, KEY, CAPRICE HDM BASE
3	1	10-007329	BRKT, HDM BASE, COLORADO, 2015
4	1	C-HK-102	BASE OFFSET HK
5	2	GSM31005	WASHER, 1/4 FLAT ZP, BLACK
6	2	GSM31026	WASHER 1/4 LOCK ZP
7	2	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP
8	1	C-HDM-100-INST	INSTALLATION INSTRUCTIONS, C-HDM-100S MOUNTING BASE

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTALLATION INSTRUCTIONS, HDM BASE, 2015+ COLORADO.		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. C-HDM-188-INST	REV 8-15
WEIGHT (LB): 14.26	SCALE: 1:4	SHEET 1 OF 1