


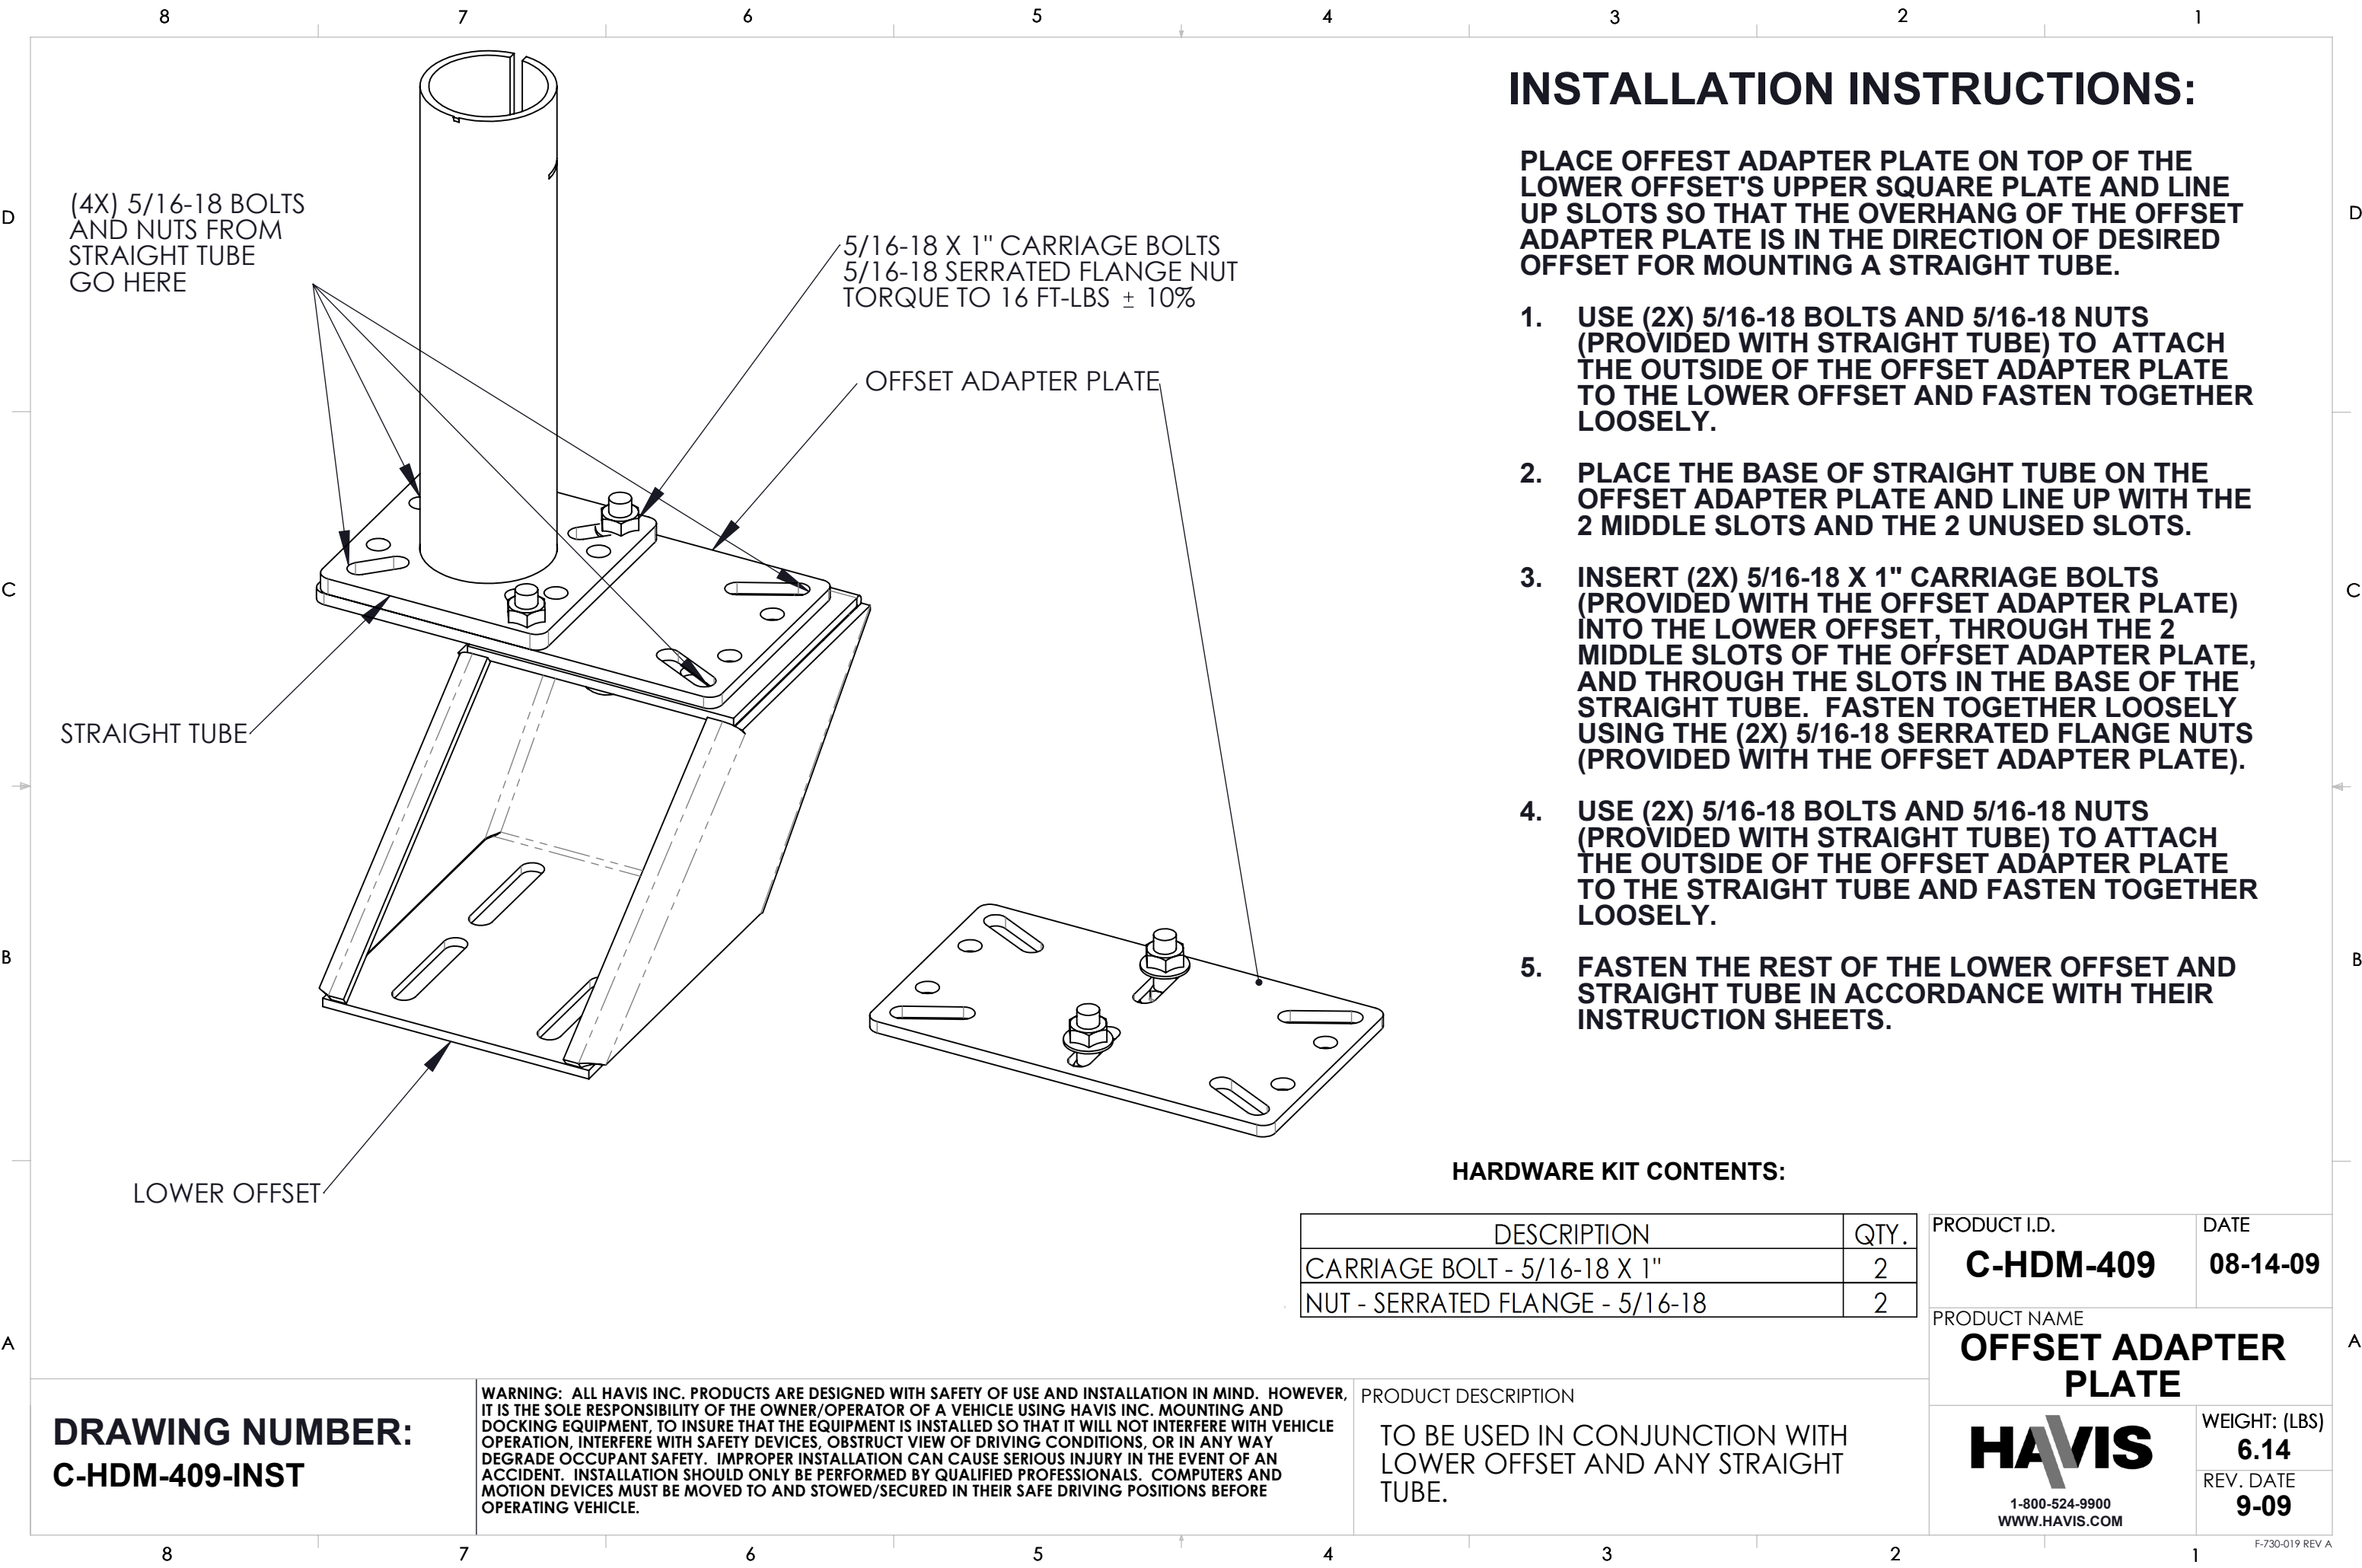

INSTALLATION INSTRUCTIONS:

PLACE OFFSET ADAPTER PLATE ON TOP OF THE LOWER OFFSET'S UPPER SQUARE PLATE AND LINE UP SLOTS SO THAT THE OVERHANG OF THE OFFSET ADAPTER PLATE IS IN THE DIRECTION OF DESIRED OFFSET FOR MOUNTING A STRAIGHT TUBE.

- 1. USE (2X) 5/16-18 BOLTS AND 5/16-18 NUTS (PROVIDED WITH STRAIGHT TUBE) TO ATTACH THE OUTSIDE OF THE OFFSET ADAPTER PLATE TO THE LOWER OFFSET AND FASTEN TOGETHER LOOSELY.
- 2. PLACE THE BASE OF STRAIGHT TUBE ON THE OFFSET ADAPTER PLATE AND LINE UP WITH THE 2 MIDDLE SLOTS AND THE 2 UNUSED SLOTS.
- 3. INSERT (2X) 5/16-18 X 1" CARRIAGE BOLTS (PROVIDED WITH THE OFFSET ADAPTER PLATE) INTO THE LOWER OFFSET, THROUGH THE 2 MIDDLE SLOTS OF THE OFFSET ADAPTER PLATE, AND THROUGH THE SLOTS IN THE BASE OF THE STRAIGHT TUBE. FASTEN TOGETHER LOOSELY USING THE (2X) 5/16-18 SERRATED FLANGE NUTS (PROVIDED WITH THE OFFSET ADAPTER PLATE).
- 4. USE (2X) 5/16-18 BOLTS AND 5/16-18 NUTS (PROVIDED WITH STRAIGHT TUBE) TO ATTACH THE OUTSIDE OF THE OFFSET ADAPTER PLATE TO THE STRAIGHT TUBE AND FASTEN TOGETHER LOOSELY.
- 5. FASTEN THE REST OF THE LOWER OFFSET AND STRAIGHT TUBE IN ACCORDANCE WITH THEIR INSTRUCTION SHEETS.

HARDWARE KIT CONTENTS:

DESCRIPTION	QTY.
CARRIAGE BOLT - 5/16-18 X 1"	2
NUT - SERRATED FLANGE - 5/16-18	2

PRODUCT I.D.	DATE
C-HDM-409	08-14-09

PRODUCT NAME
OFFSET ADAPTER PLATE

 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS)
	6.14
	REV. DATE
	9-09

DRAWING NUMBER:
C-HDM-409-INST

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

PRODUCT DESCRIPTION
TO BE USED IN CONJUNCTION WITH LOWER OFFSET AND ANY STRAIGHT TUBE.