
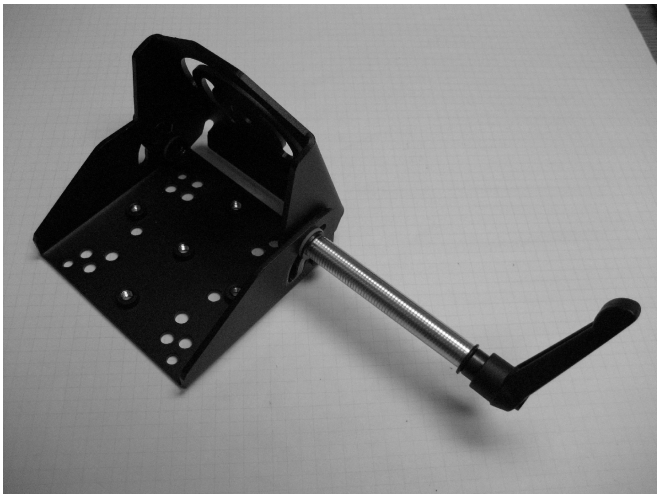
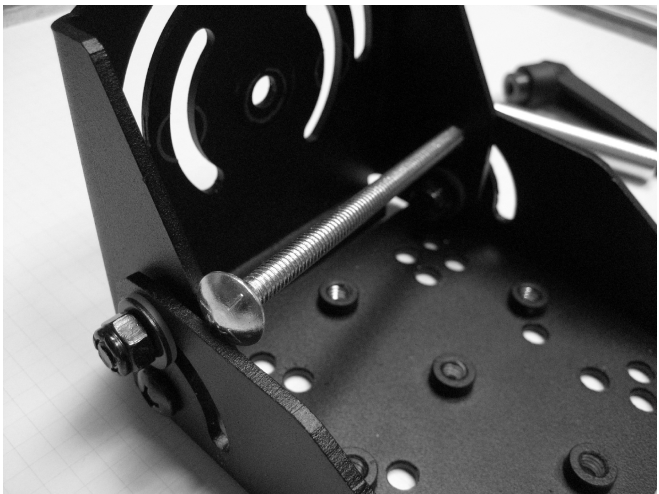


HANDLE INSTALLATION WHEN CONVERTING STANDARD SHORT HANDLE TO OPTIONAL LONG HANDLE OR NO HANDLE ON C-MD-112 (C-MD-202 SHOWN)

NOTE: (IF ADJUSTABLE HANDLE IS NOT NEEDED, SKIP TO STEP 5.)

- 1. UNSCREW HANDLE AND REMOVE CARRIAGE BOLT, WASHERS AND SPACER ASSEMBLY.
- 2. OPEN TILT AS FAR AS POSSIBLE.
- 3. PUT LONG CARRIAGE BOLT INTO HOLE AT AN ANGLE. IT IS A TIGHT FIT AND MAY REQUIRE SPINNING THE BOLT (WITH PLIERS) FOR THE FIRST 1/4 INCH. (NOTE: IT MAY HELP TO LOOSEN - BUT NOT REMOVE - THE OTHER BOLTS TO HELP INSERT LONG BOLT.
- 4. REINSTALL WASHERS FROM STEP ONE, INSTALL SPACER AND REINSTALL HANDLE.
- 5. IF NO HANDLE IS REQUIRED, REMOVE ADJUSTABLE HANDLE, CARRIAGE BOLT AND SPACER. REPLACE LONG CARRIAGE BOLT WITH 3/4" LONG CARRIAGE BOLT. IN LIEU OF ADJUSTABLE HANDLE, REPLACE WITH SUPPLIED 1/4-20 NYLOCK NUT. KEEP NYLON WASHER AND STEEL WASHER ASSEMBLED AS SHOWN

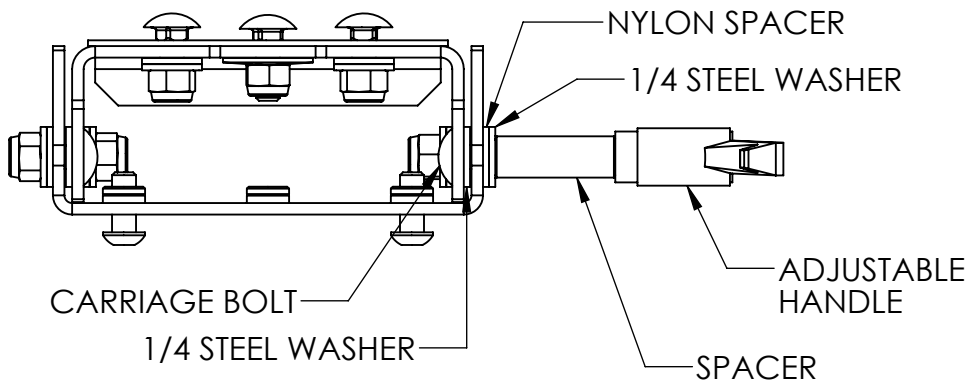

C-HK-195 HANDLE EXTENSION HARDWARE KIT			
ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	CM86600	SPACER 1/16" NYLON
2	1	GSM30016-1	NUT 1/4-20 NYLOCK ZP THIN, BLK
3	2	GSM31099	WASHER 1/4" I/D 5/8" OD .1" THK
4	1	GSM32000	BOLT, 1/4-20 x 3/4 CARRIAGE ZP, BLK
5	1	GSM32036	SCREW, 1/4-20 X 4 1/2 CARRIAGE ZP
6	1	HS93079	SPACER, 3.5" LONG
7	1	C-HK-195-INST	INSTALLATION OF OPTIONAL HANDLE FOR C-MD-202, 206 AND 207

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900	
TITLE: INSTALLATION OF OPTIONAL HANDLE FOR C-MD-112			
DO NOT SCALE DRAWING			
SIZE A	DWG. NO. C-HK-195-INST		REV 1-16
WEIGHT (LB): N/A		SCALE: 1:5	SHEET 1 OF 1