
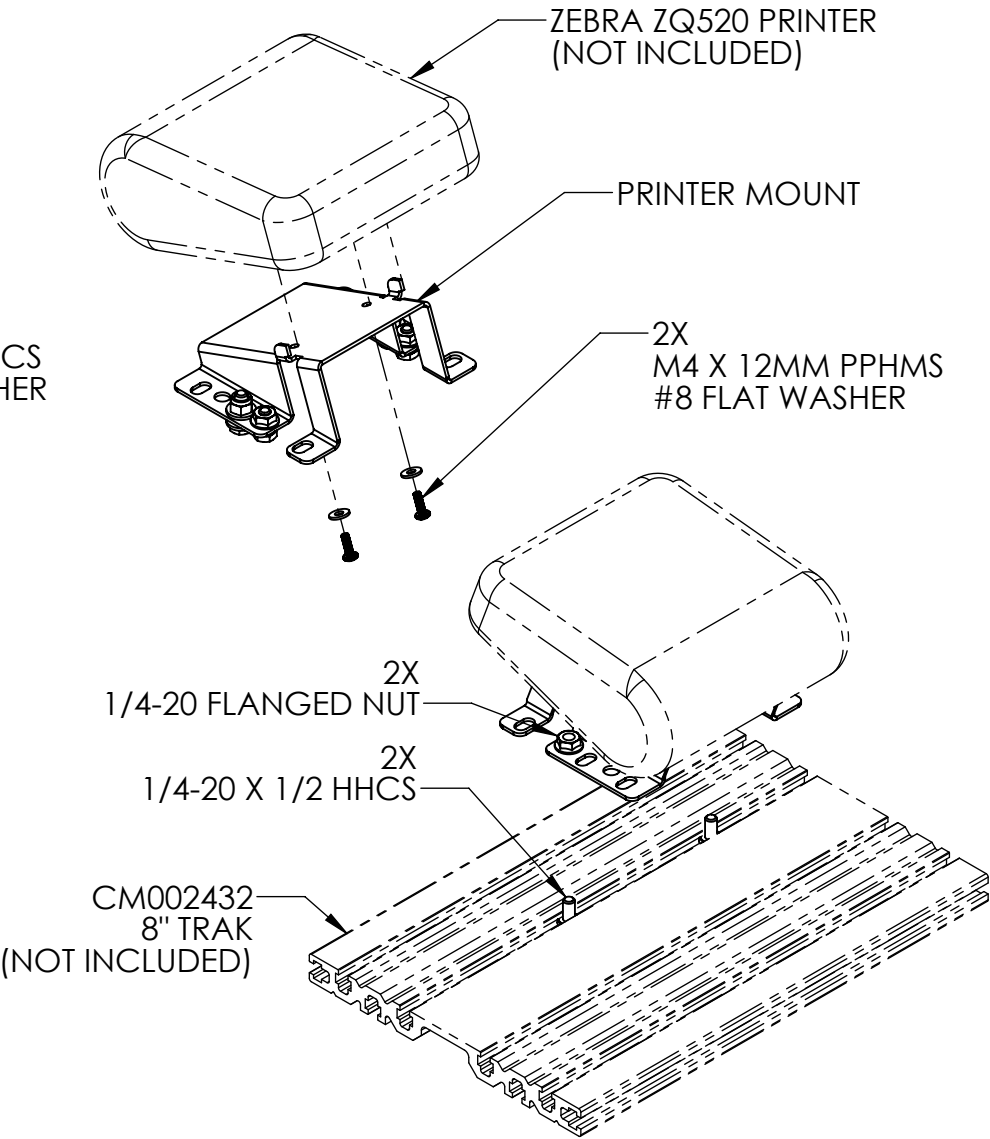


INSTALLATION:

1. POSITION EARS OF BRACKET INTO THE SLOTS ON THE BOTOM OF THE PRINTER AND SLIDE THE PRINTER DOWN TO LOCK IN PLACE.
2. INSTALL (2) M4 X 12MM SCREWS AND #8 FLAT WASHERS INTO PRINTER TO SECURE.
3. INSTALL THE PRINTER AND BRACKET TO A MOUNT USING HARDWARE PROVIDED.

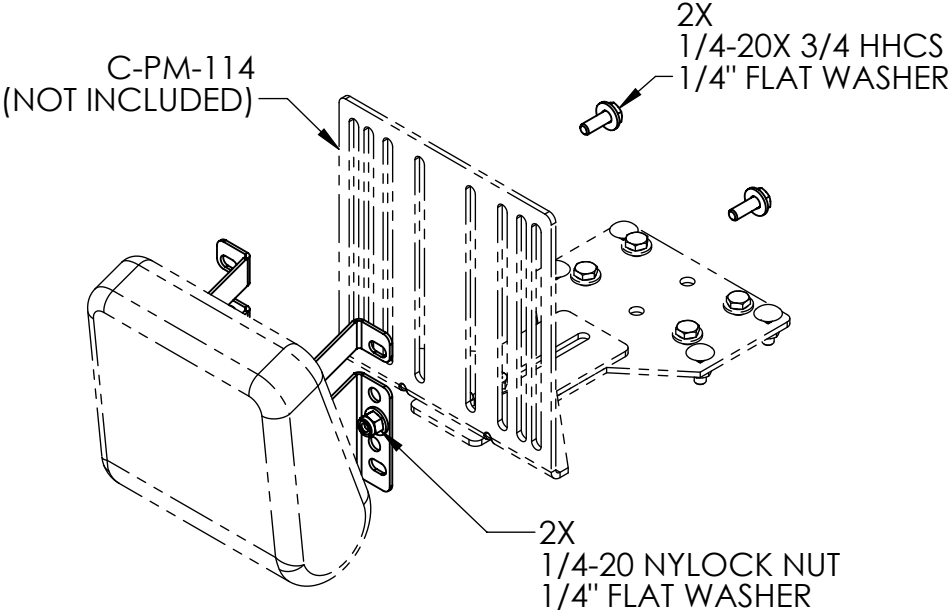

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	10-007448	BRKT, PRINTER MOUNT , ZEBRA ZQ520
3	2	GSM30016	NUT 1/4-20 NYLOCK, BLK, ZP, GRD 5
4	2	GSM30023	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
5	2	GSM31002	WASHER #8 FLAT ZP
6	4	GSM31005	WASHER, 1/4 FLAT ZP, BLACK
7	2	GSM33000	SCREW 1/4-20 X 1/2 HHCS, BLK, ZP, GRD 5
8	2	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP BLK
9	2	GSM33708	SCREW, PPHMS, M4X0.7MMx12MM,18-8SS

HAVIS HAVIS, INC.			75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTALLATION INSTRUCTIONS, C-PM-118			
DO NOT SCALE DRAWING			
SIZE A	DWG. NO. C-PM-118-INST	REV 2-16	
WEIGHT (LB): 3.11		SCALE: 1:4	SHEET 1 OF 1