

INSTALLATION INSTRUCTIONS

C-SBX-101-KIT-5 Standalone C-SBX-101 mount for 2020 Interceptor Utility

If using with Pro-Gard rear partition, PROKIT-2 is required.

TOOLS REQUIRED:

Standard socket set

Standard wrench set

T-55 Torx socket


PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Passenger side lower mounting bracket	CM009682
1	Driver side lower mounting bracket	CM009683
1	SBX base mount	CM010159
2	U-Bolt	GSM20406
2	3/8" Nylock nut	GSM30018
4	1/4" Serrated nut	GSM30023
4	1/4" Flat washer	GSM31005
4	5/16" Flat washer	GSM31006
4	5/16" Split lock washer	GSM31027
4	3/8" x 1" Flat washer	GSM31144
4	1/4" x 3/4" Hex head bolt	GSM33001
2	3/8" x 1.75" Hex head bolt	GSM33303

Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
- **Make sure wire harnesses are out of the way before bolting down equipment**
 - Use hardware provided with install kit

C-SBX-101-KIT-5

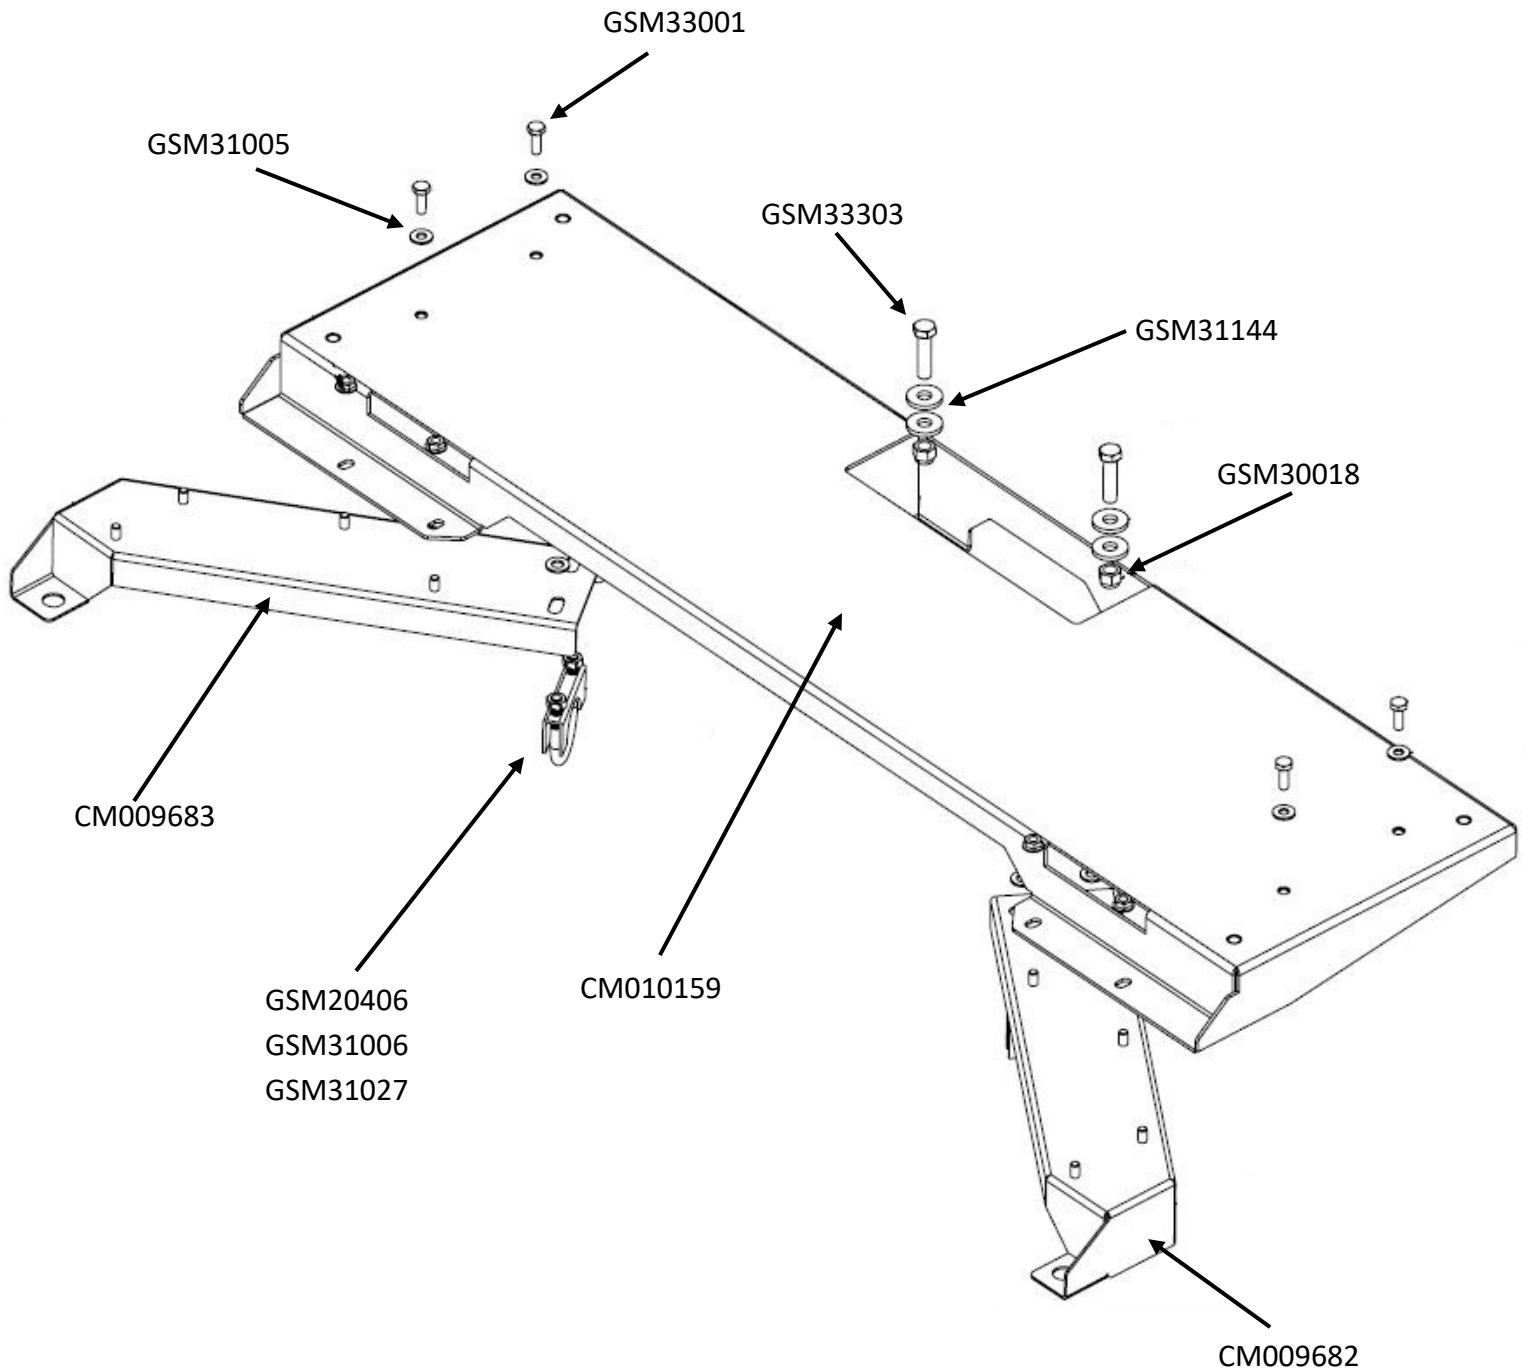



Remove forward section of the OEM trunk floor.
T-55 Torx socket



Remove rear bolt from OEM cross brace and install lower mounting bracket re-using OEM bolt.
Repeat for passenger side



Attach other end of lower support bracket with supplied U-bolt, flat washers, lock washers and nuts.
Repeat for other side



Place base into the rear of the vehicle.



Line up to rear lower mounting brackets and attach using (4) 1/4" serrated nuts.



Attach forward section of mounting base to OEM cross brace using (2) 3/8" x 1" bolts, washers, and nylock nuts.



Slide the SBX-101 box into the rear of vehicle and rest on base.



Attach using (4) 1/4" x 3/4" bolts and flat washers.

Note: Old C-SBX-101 boxes will require holes to be drilled for these bolts.



Installation is now complete.