


FRONT

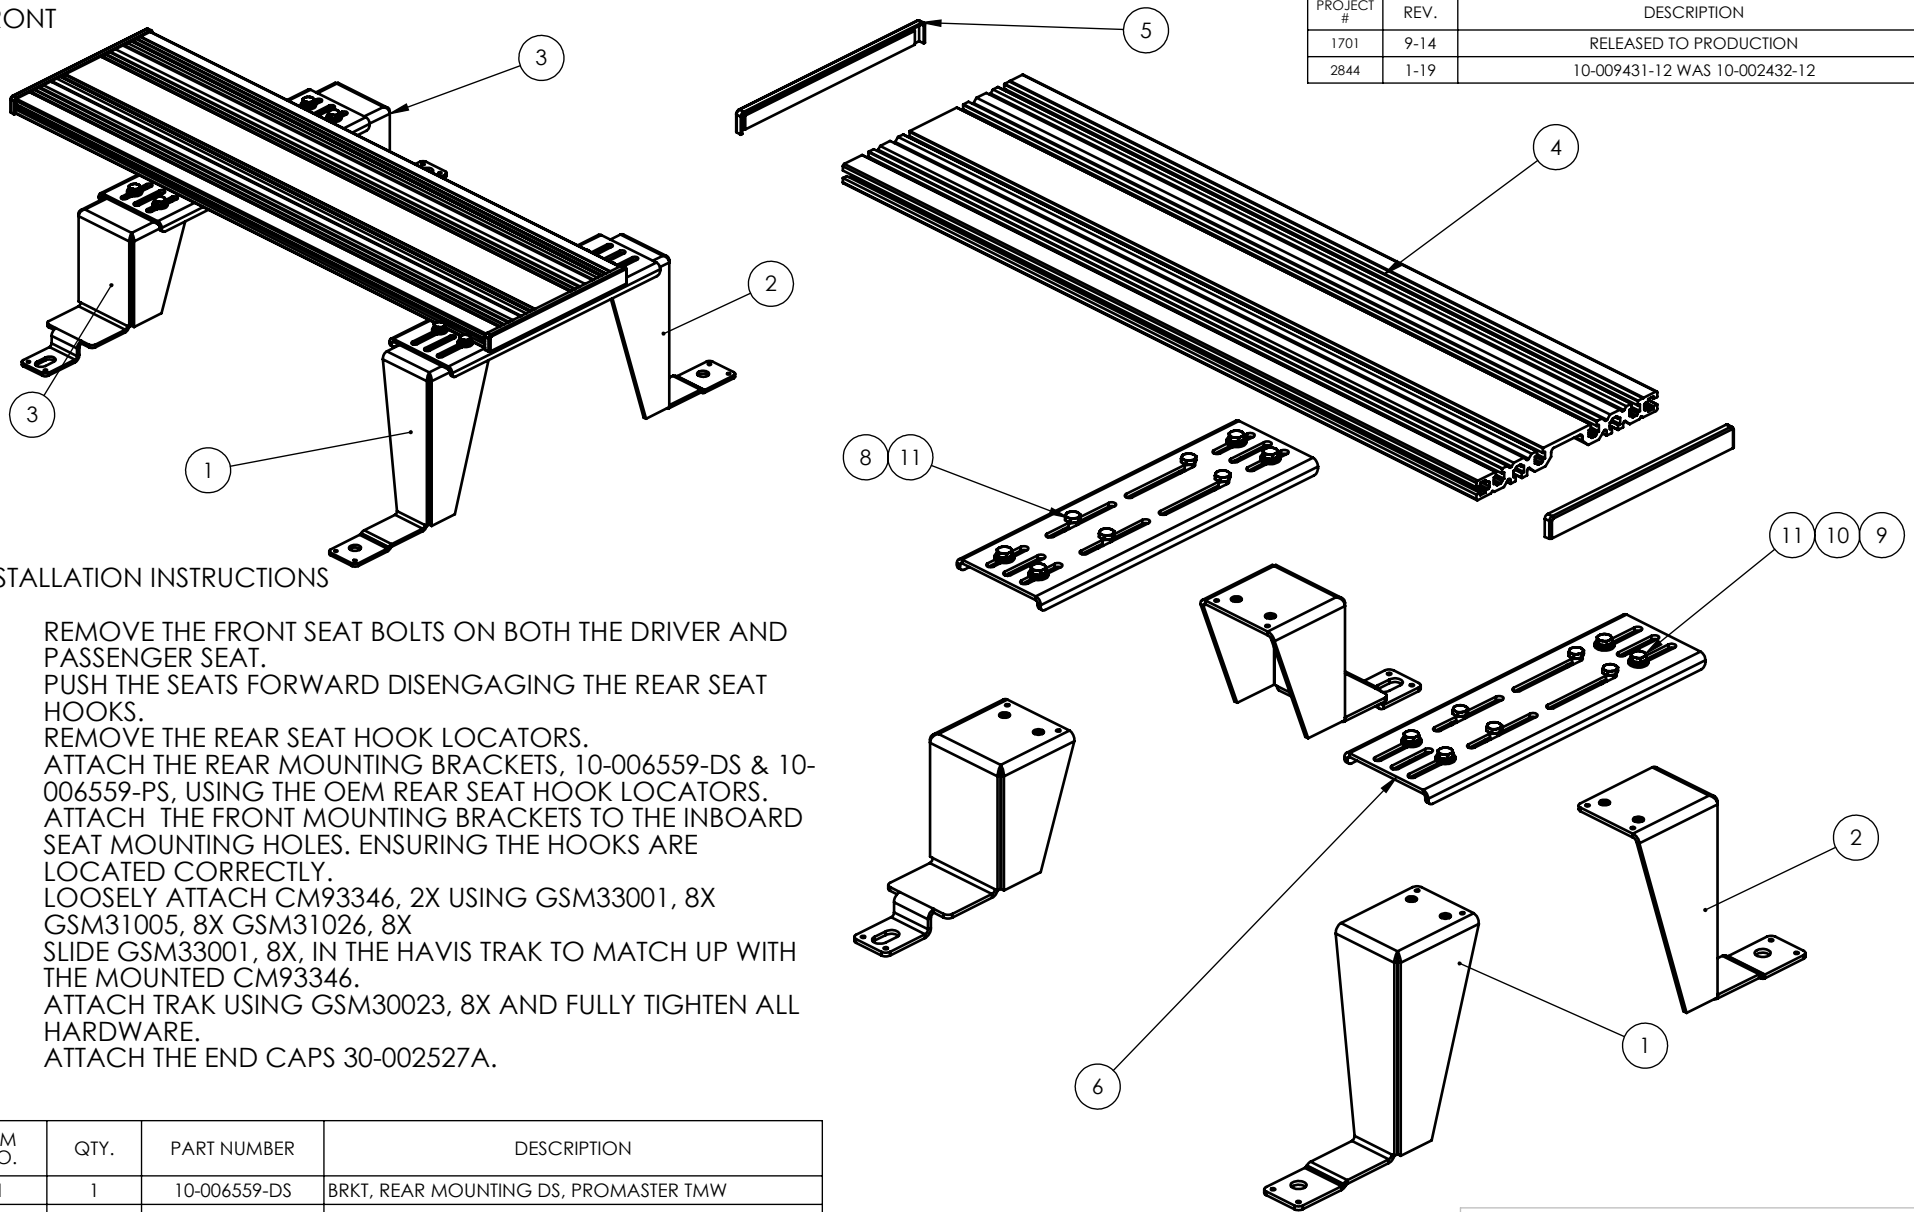

PROJECT #	REV.	DESCRIPTION
1701	9-14	RELEASED TO PRODUCTION
2844	1-19	10-009431-12 WAS 10-002432-12

INSTALLATION INSTRUCTIONS

1. REMOVE THE FRONT SEAT BOLTS ON BOTH THE DRIVER AND PASSENGER SEAT.
2. PUSH THE SEATS FORWARD DISENGAGING THE REAR SEAT HOOKS.
3. REMOVE THE REAR SEAT HOOK LOCATORS.
4. ATTACH THE REAR MOUNTING BRACKETS, 10-006559-DS & 10-006559-PS, USING THE OEM REAR SEAT HOOK LOCATORS.
5. ATTACH THE FRONT MOUNTING BRACKETS TO THE INBOARD SEAT MOUNTING HOLES. ENSURING THE HOOKS ARE LOCATED CORRECTLY.
6. LOOSELY ATTACH CM93346, 2X USING GSM33001, 8X GSM31005, 8X GSM31026, 8X
7. SLIDE GSM33001, 8X, IN THE HAVIS TRAK TO MATCH UP WITH THE MOUNTED CM93346.
8. ATTACH TRAK USING GSM30023, 8X AND FULLY TIGHTEN ALL HARDWARE.
9. ATTACH THE END CAPS 30-002527A.

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	10-006559-DS	BRKT, REAR MOUNTING DS, PROMASTER TMW
2	1	10-006559-PS	BRKT, REAR MOUNTING PS, PROMASTER TMW
3	2	10-006560	BRKT, FRONT MOUNTING, PROMASTER TMW
4	1	10-009431-12	8" WIDE TRAK MOUNT 28" LONG
5	2	30-002527A	KIT, TRAK MOUNT GASKET AND END CAP
6	2	CM93346	BRACKET, CENTER, HUMP
7	4	GSM30005	NUT 1/4-20 HEX BLK, ZINC, GRD 5
8	8	GSM30023	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
9	12	GSM31005	WASHER, 1/4 FLAT ZP, BLACK
10	12	GSM31026	WASHER 1/4 LOCK ZP BLK
11	20	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP BLK

HAVIS		HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900	
TITLE: INSTALLATION INSTRUCTIONS, DODGE PROMASTER TRAK MOUNT					
DO NOT SCALE DRAWING					
SIZE A	DWG. NO. C-TMW-PRO-01-INST			REV 1-19	
WEIGHT (LB): 19.82		SCALE: 1:16		SHEET 1 OF 1	