


INSTALLATION INSTRUCTIONS:

- 1. REMOVE 4X GSM33178, CM93084 RUBBER BUMPER, AND CENTER BRACKET FROM C-PM-124.
- 2. PLACE RETROFIT CENTER BRACKET IN C-PM-124 AND INSTALL EXISTING CM93084 RUBBER BUMPER AND 4X NEW GSM33178.
- 3. REMOVE 8X GSM33178 AND CENTER U-BRACKET (C-VS-0618-INUT SHOWN). IF C-PM-124 IS ALREADY INSTALLED, REMOVE THAT INSTEAD THEN DO SETPS 1 & 2.
- 4. INSERT C-PM-124 WITH RETROFIT IN EMPTY SPACE AND INSTALL WITH 12X GSM33178.

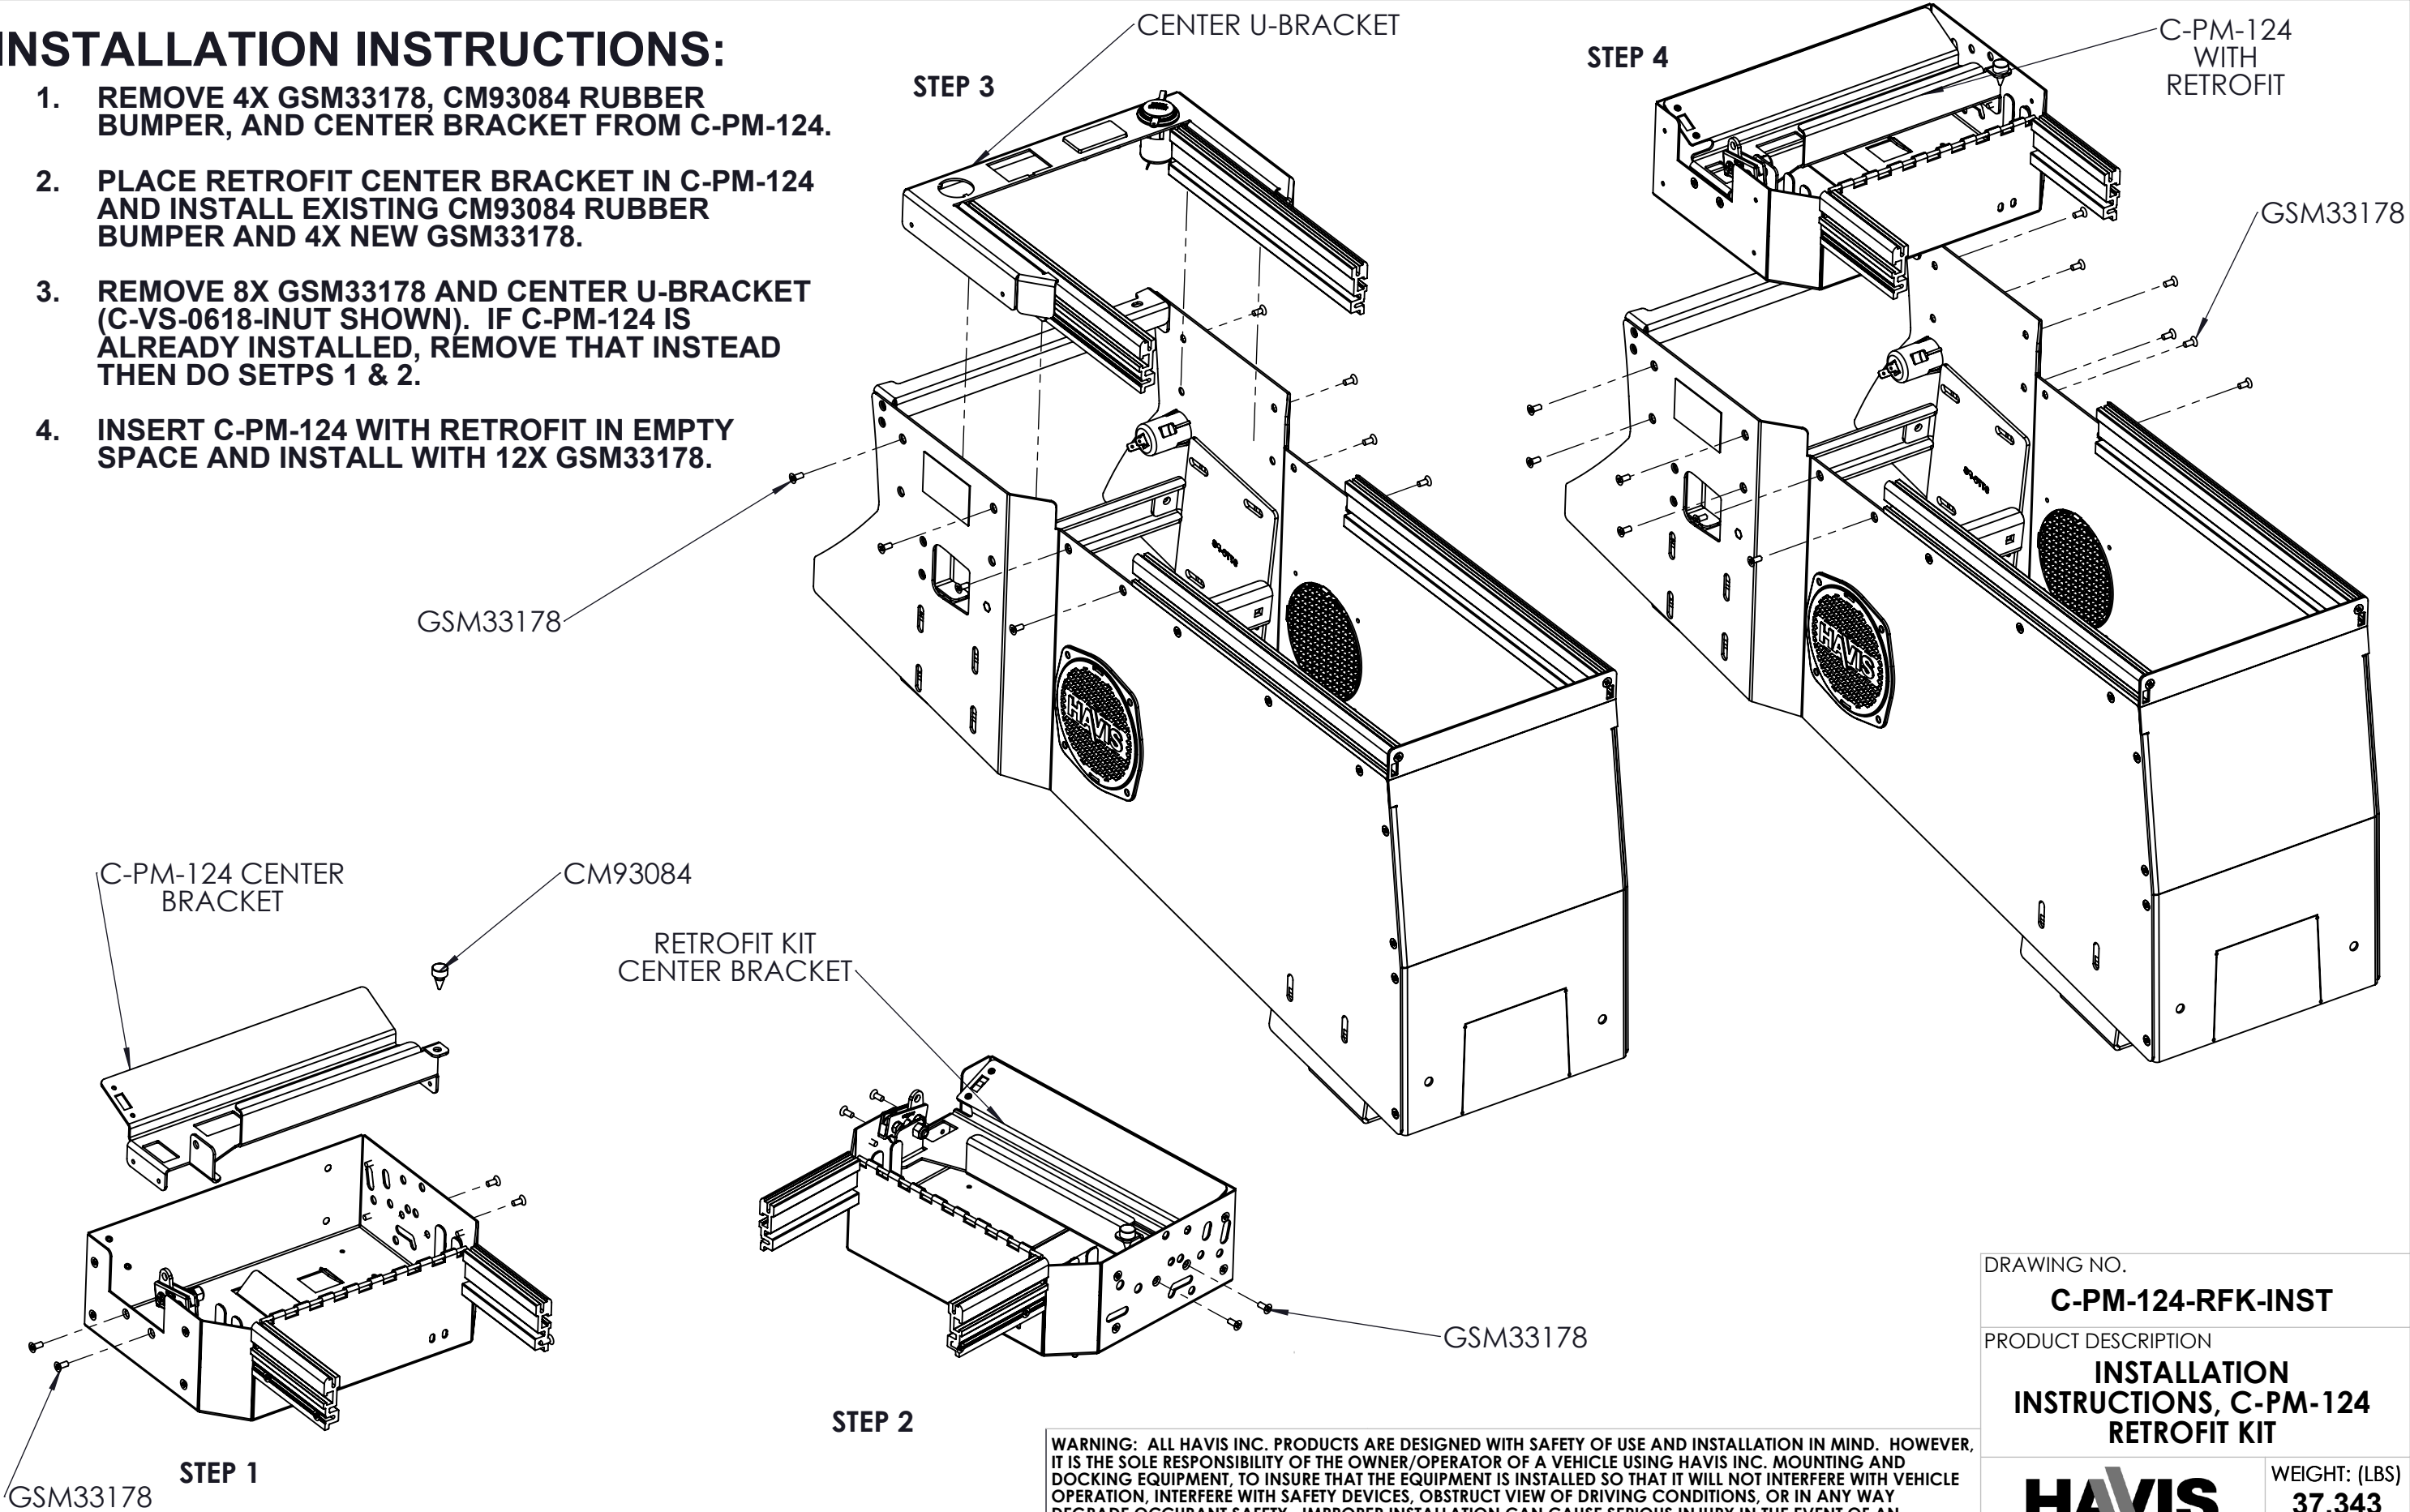

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO.	C-PM-124-RFK-INST
PRODUCT DESCRIPTION	INSTALLATION INSTRUCTIONS, C-PM-124 RETROFIT KIT
HAVIS 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS) 37.343 REV. DATE 01/03/23